 





CZUR ET16 Plus



Book Scanner Quick User Guide

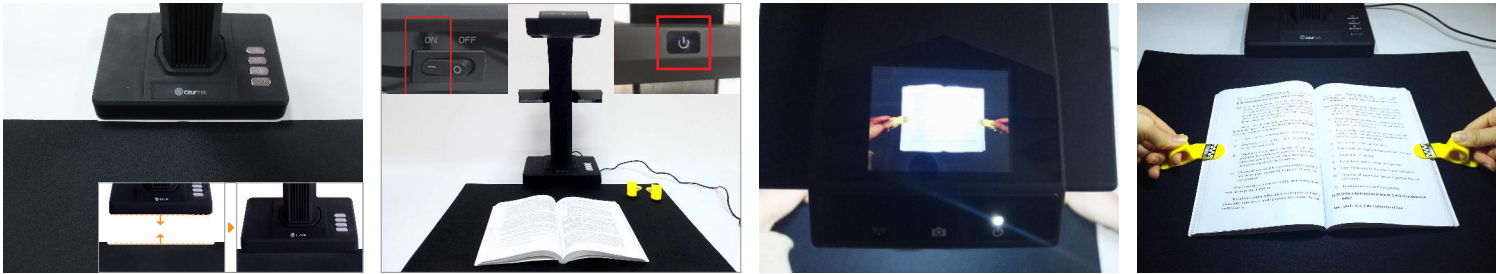

 1. Spread the black document pad under the scanner's head. Ensure that the black document pad aligned with the device without any gap.
2. Check the power switch is on, through the LCD on the head portion to see if the pad covers the entire screen and ensure that the desk surface or random edges are not included within the scan.
3. When scanning magazines, coated paper, photo and other glossy materials, switch the anti-reflection side lights ON and main lights OFF for best effects.
4. Use the finger cots hold down left and right edges of the book (This can be removed by software automatically).

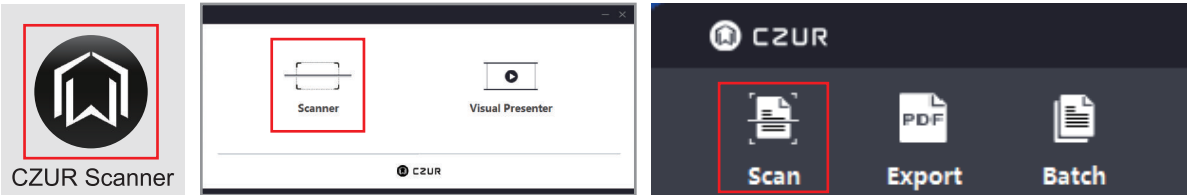

  
Start CZUR Scanner software, click the [Scanner] function, the main menu pops up. Choose [Scan] on the top and enter the preview window. When scanning books, the 3 laser lines of the scanner must be on the covered pages, and turn the page after flash of laser lines.

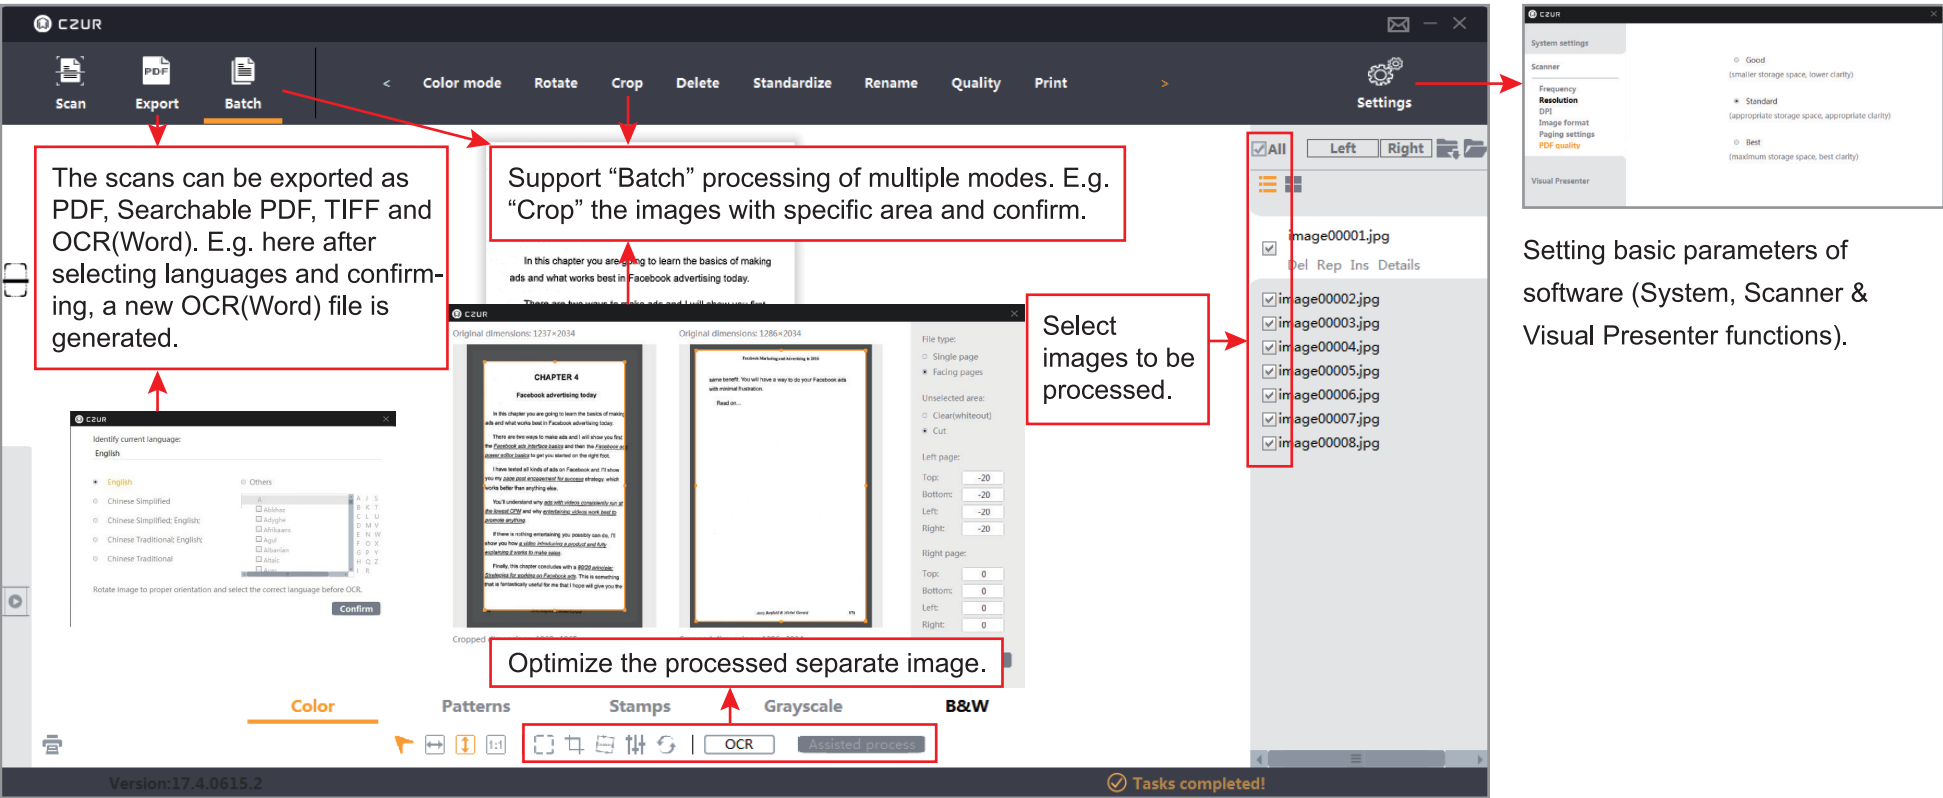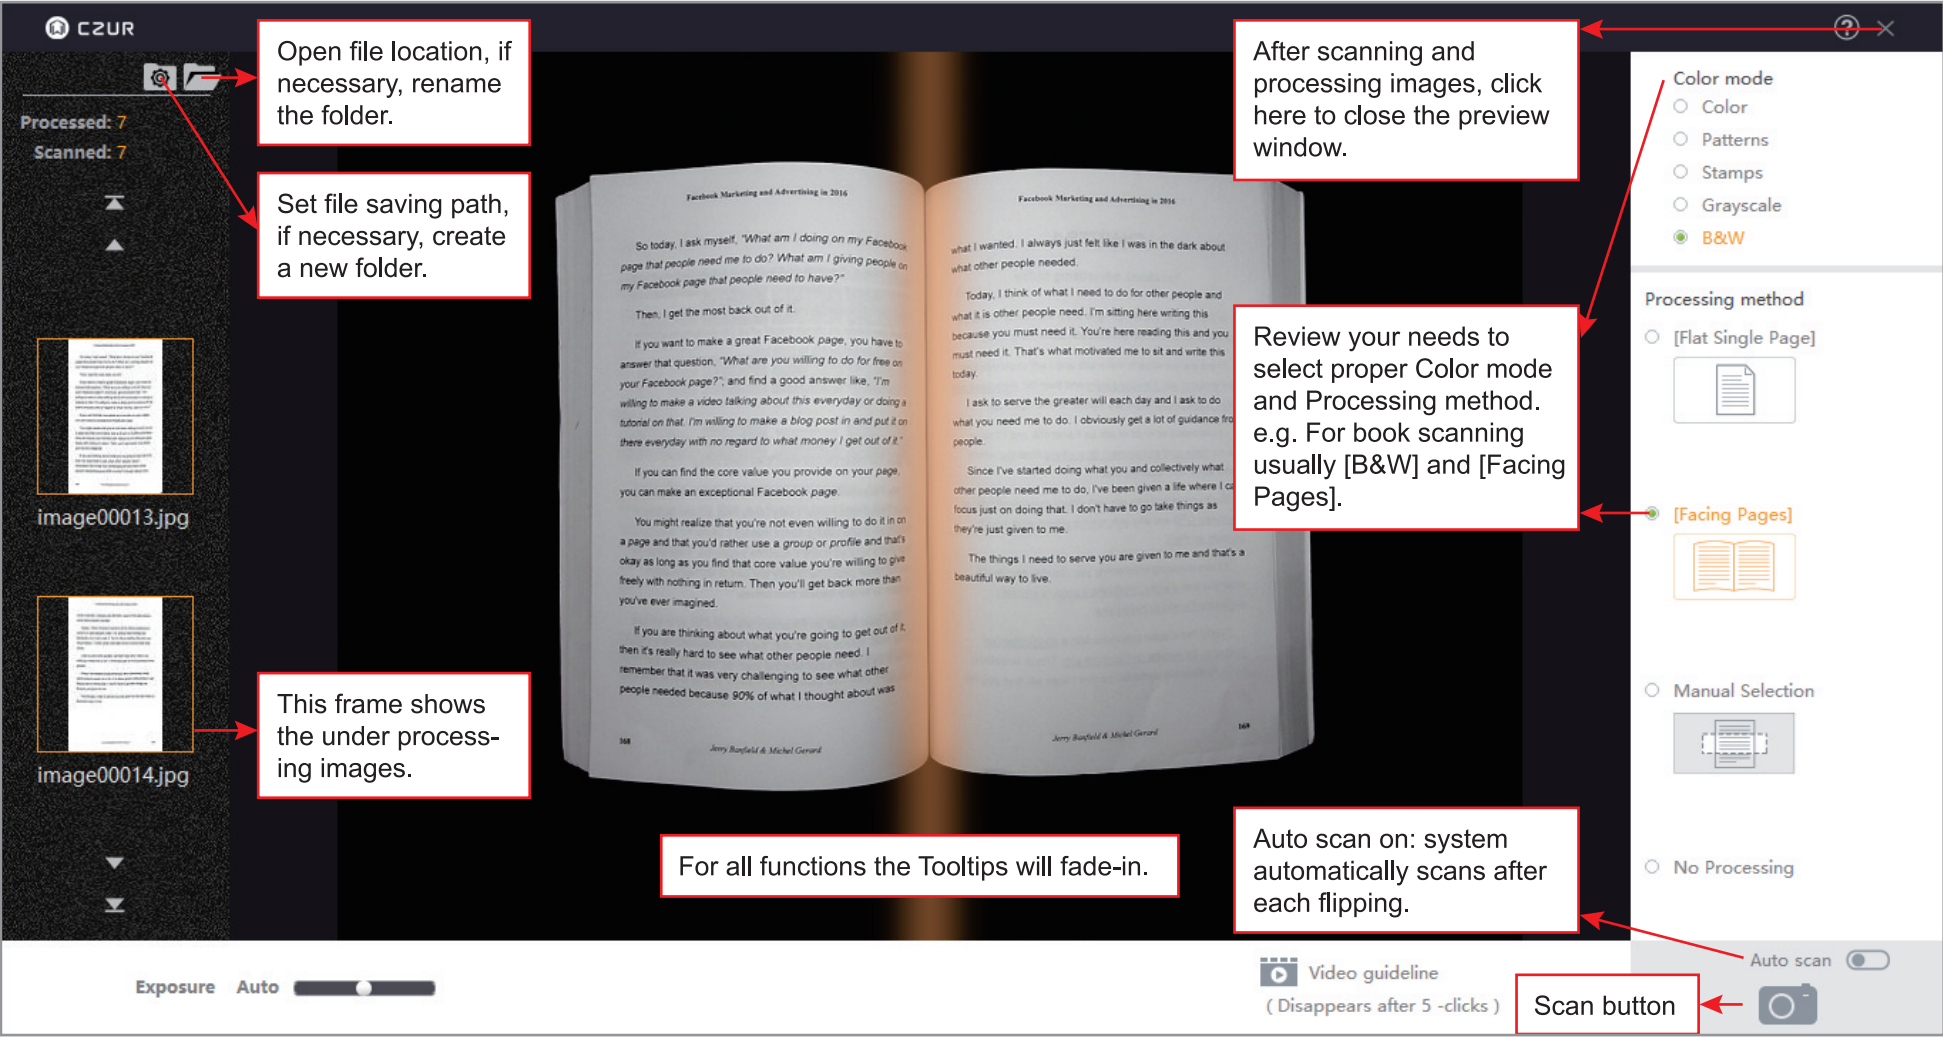




CZUR ET16

 Book Scanner Quick User Guide

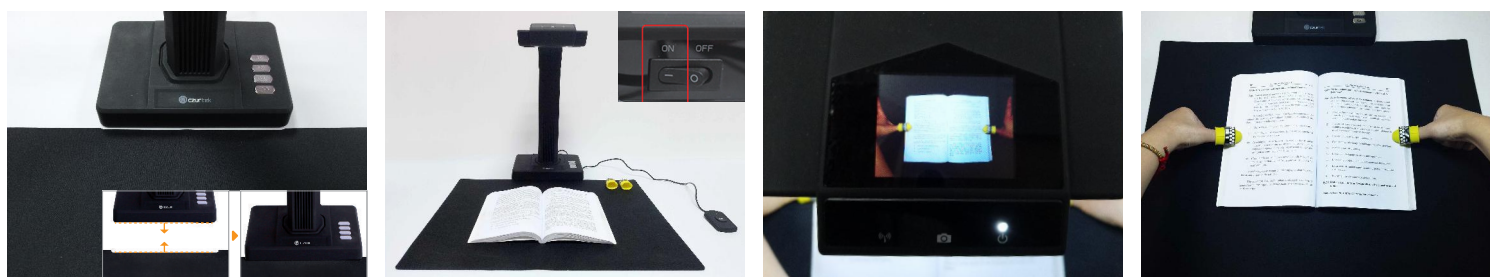

 1. Spread the black document pad under the scanner's head. Ensure that the black document pad aligned with the device without any gap.
2. Check the power switch is on, through the LCD on the head portion to see if the pad covers the entire screen and ensure that the desk surface or random edges are not included within the scan.
3. Use the finger cots hold down left and right edges of the book (This can be removed by software automatically).

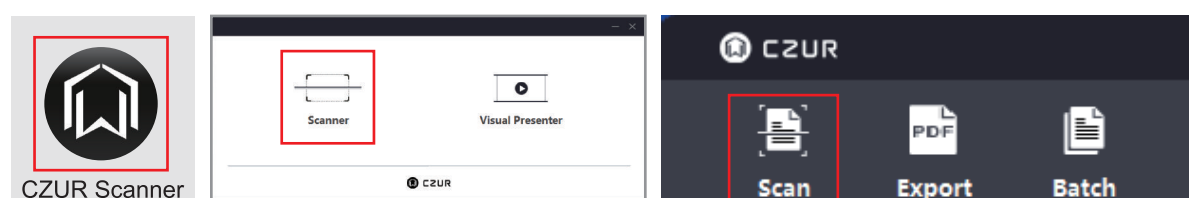

Start CZUR Scanner software, click the [Scanner] function, the main menu pops up. Choose [Scan] on the top and enter the preview window. When scanning books, the 3 laser lines of the scanner must be on the covered pages, and turn the page after flash of laser lines.

