



# How to use Rename

Choose the images you want to "Rename".

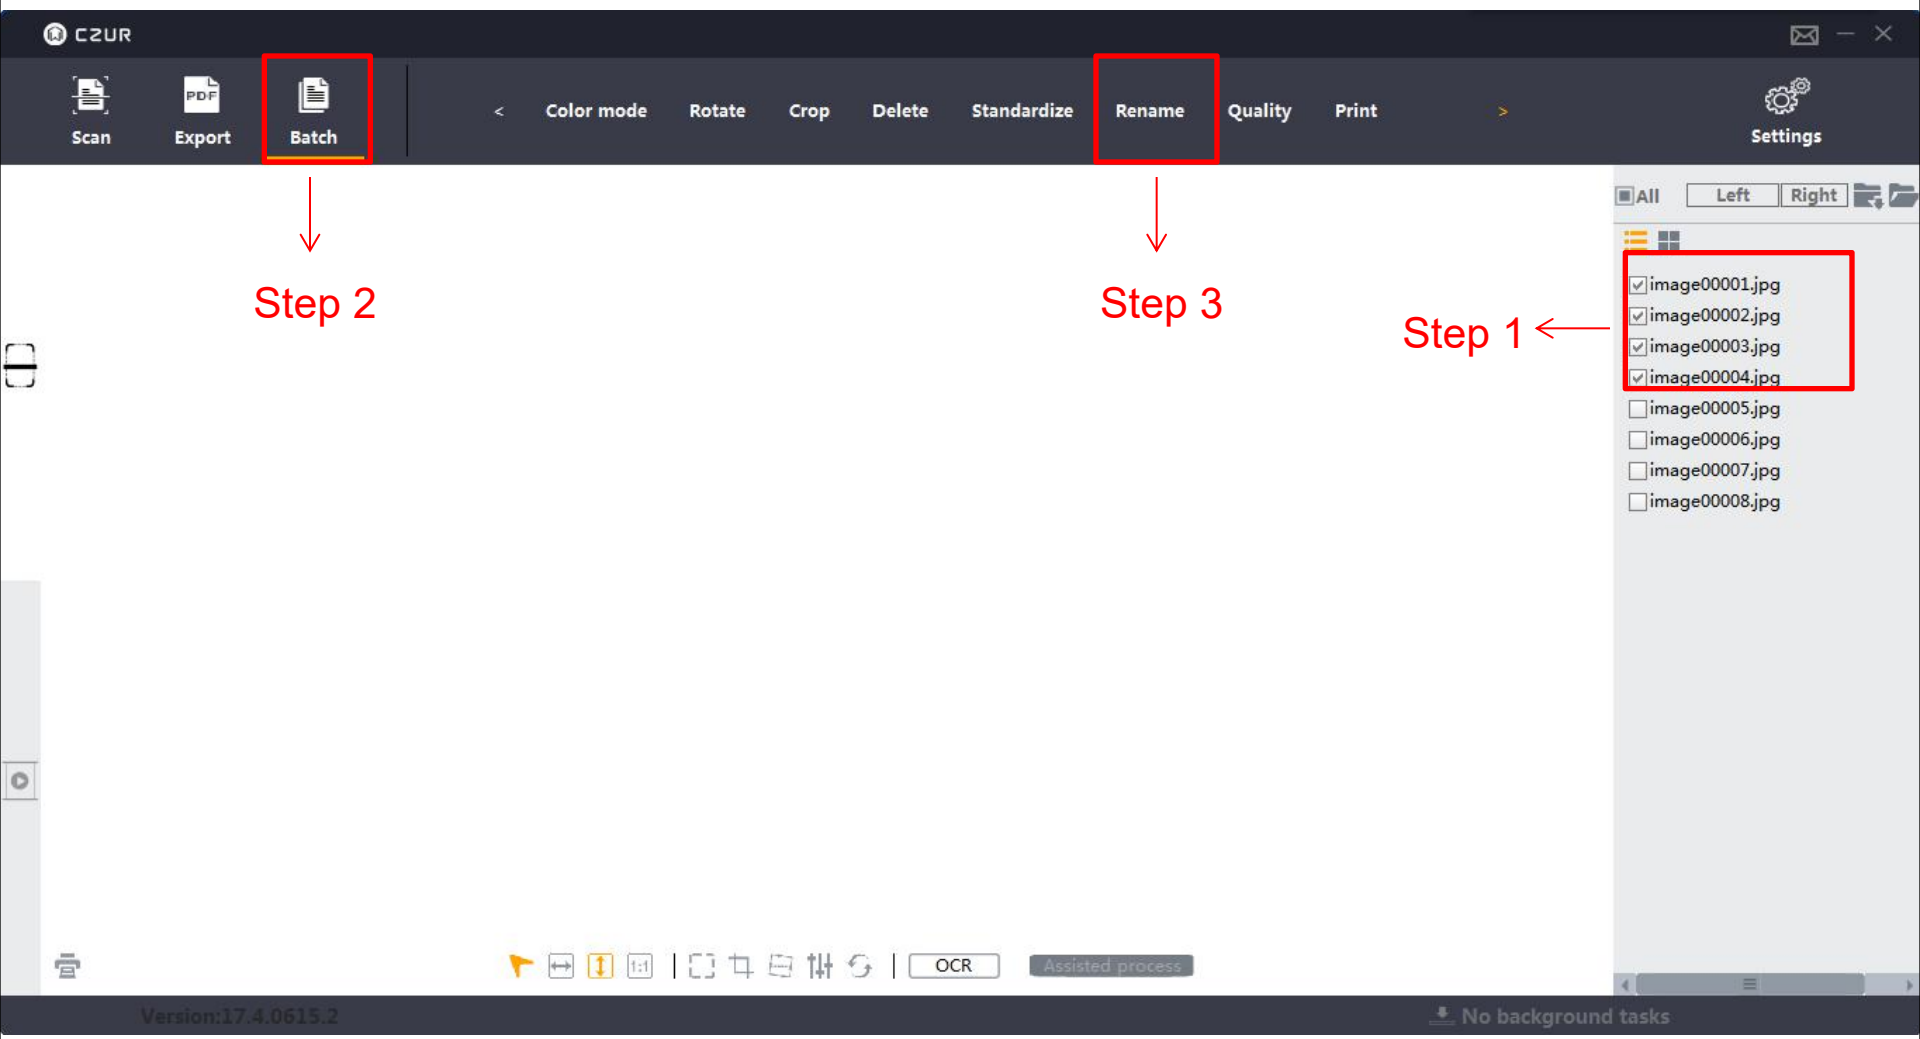

In pops-up dialog edit the “Prefix”,and “Serial number”.

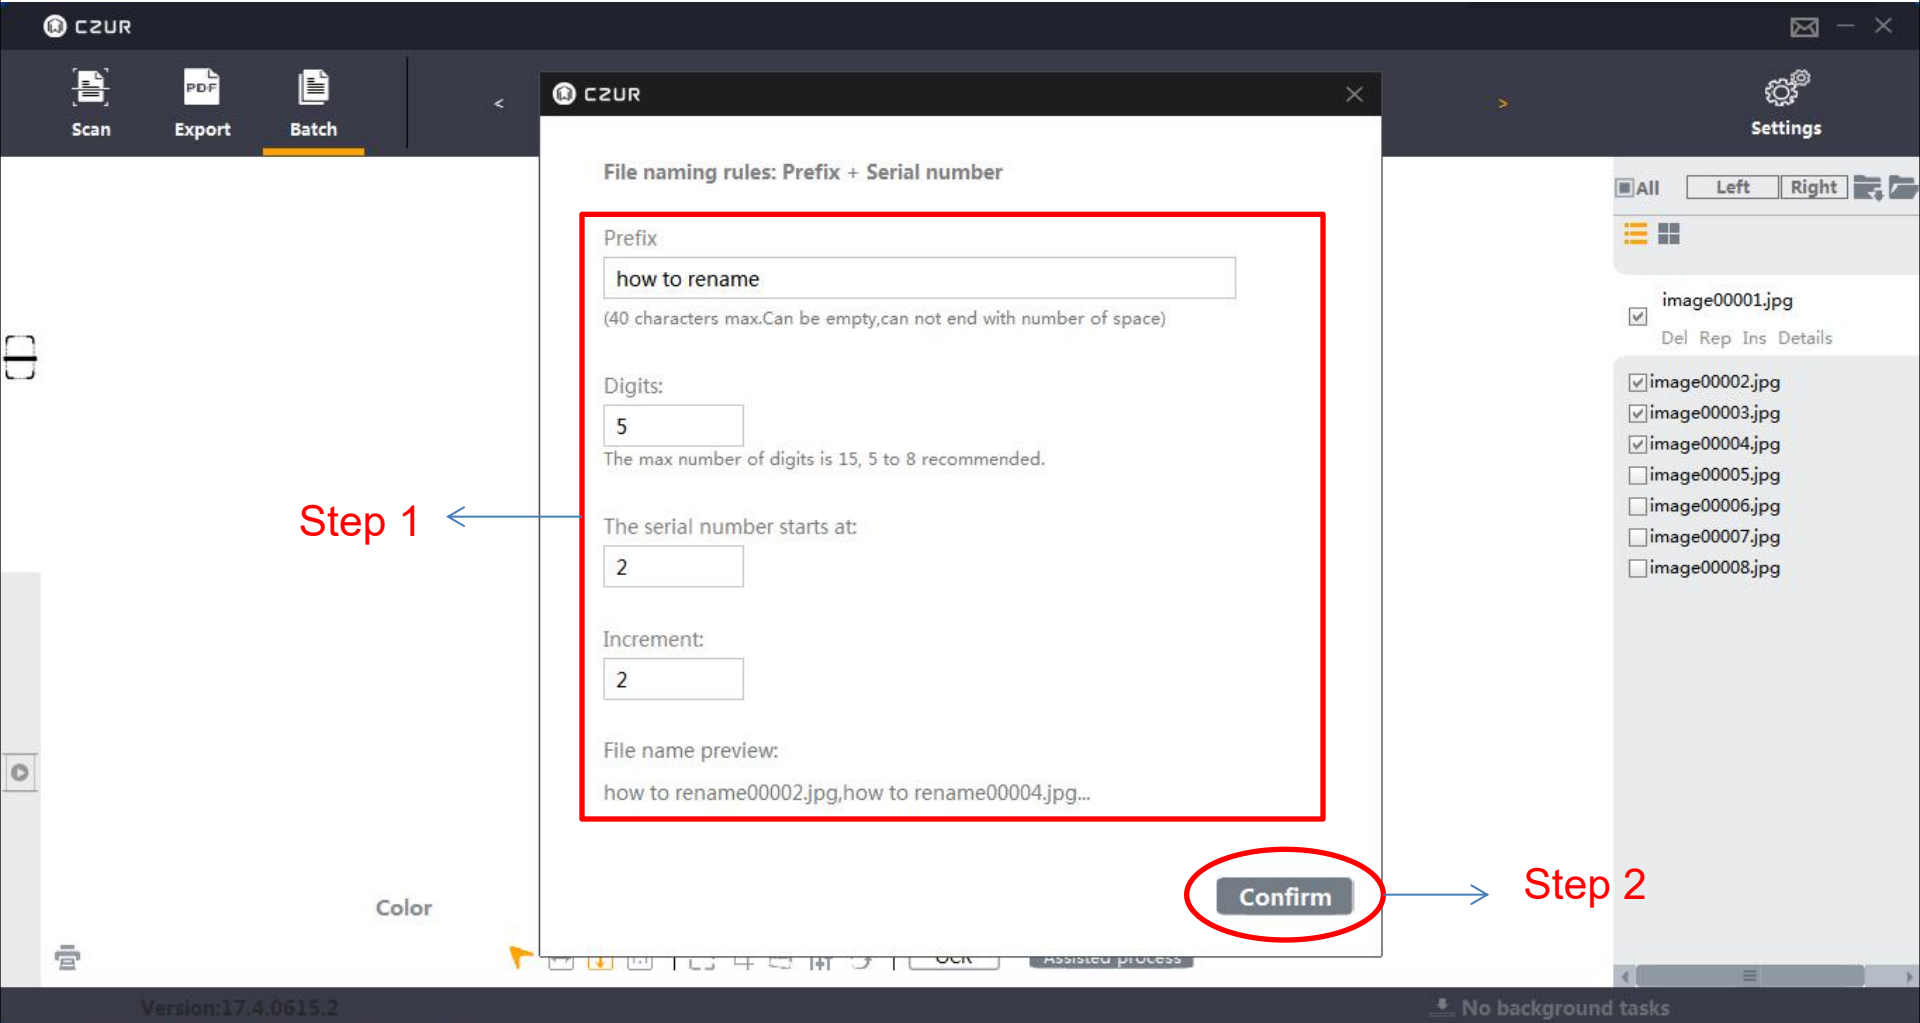

Step 1

Step 2

Save as document.

The screenshot displays the CZUR software interface. At the top, there are buttons for 'Scan', 'Export', and 'Batch'. A 'Settings' gear icon is visible in the top right. The main window shows 'File naming rules: Prefix + Serial number' with a 'Prefix' field containing 'image'. A 'Browse For Folder' dialog is open, showing a file tree with 'book' selected. The 'Folder:' field at the bottom of the dialog contains 'book'. A 'Confirm' button is located at the bottom right of the dialog. Two red annotations are present: 'Step 1' with an arrow pointing to the 'Make New Folder' button, and 'Step 2' with an arrow pointing to the 'OK' button. The 'OK' button is circled in red. The 'Make New Folder' button is also highlighted with a red box. The background shows a list of image files on the right side of the interface.

Step 1 Color

Step 2

Successful complete.

The screenshot displays the CZUR software interface. At the top, a dark navigation bar contains the CZUR logo, icons for 'Scan', 'Export', and 'Batch' (which is highlighted), and a menu with options: 'Color mode', 'Rotate', 'Crop', 'Delete', 'Standardize', 'Rename', 'Quality', and 'Print'. A 'Settings' gear icon is also present. The main workspace shows a document page with the title 'ENVIRONMENTAL LAW' and page number '97'. A dialog box titled 'CZUR' is centered on the screen, featuring a large orange checkmark icon and the text 'Batch renaming completed'. A 'Confirm' button at the bottom right of the dialog is circled in red. On the right side, a file list panel shows a list of image files: 'image00001.jpg', 'image00002.jpg', 'image00003.jpg', 'image00004.jpg', 'image00005.jpg', 'image00006.jpg', 'image00007.jpg', and 'image00008.jpg'. The first three are checked, and the fourth has a 'Del Rep Details' link. The bottom of the interface includes a toolbar with 'Color', 'Patterns', 'Stamps', 'Grayscale', and 'B&W' (highlighted) options, along with various icons and an 'OCR' button. A status bar at the bottom left shows 'Version: 4.0' and the bottom right shows 'Tasks completed!' with a checkmark icon.

# Example:

